

LG VS415PP OPTIMUS ZONE™ 2

USERS MANUAL

Front View



Side Views



Top and Bottom View



Rear View



Key Functions

1. Earpiece Lets you hear callers and automated prompts.

2. Proximity sensor Senses proximity toward other objects (such as your head) so that tap commands are not accidentally activated during a call. It also employs an ambient sensor which measures the surrounding light and adjusts the LCD brightness to provide a vivid screen.

3. QuickTap bar Provides icons for quick, one-touch access to the apps you use most often.

4. Home key Press to return to the Home screen (or your default Home screen panel from any of the Home screen extension panels). You can also press it to wake your phone from screen timeout. Press and hold it to display recently used apps with access to the **Task Manager** app.

5. Back key Tap to return to the previous screen. It also closes pop-up items such as menus, dialog boxes, and the on-screen keyboard.

6. Menu key Tap to open an Options menu with options that affect the current screen or app. This only applies when available, depending on the screen or app.

7. Home screen Displays all of the items needed to operate your phone including icons for app access, widgets, and the Status Bar (with status icons) allowing simple touch access to all of its functions and features.

8. Volume keys Press to adjust the ringer, the media volumes, or the in-call volume during a call.

9. Power / Lock key Press to turn off the screen backlight and lock the screen, or turn the screen backlight back on. Press and hold to turn the phone on/off, restart it, activate/deactivate Airplane mode, and change the sound settings.

10. 3.5mm Headset jack Allows you to plug in an optional headset for convenient, hands-free conversations. You can also plug in headphones to listen to music.

11. Microphone Transmits your voice to the other caller. It's also used for voice-activated functions and voice recorder functions.

12. USB / Charging port Allows you to connect the phone with the Charger, or other compatible accessories.

13. Speaker Use to listen to the audio from the selected function (e.g., music, videos, sound clips, etc.).

14. Camera lens Use to take photos and record videos. Keep it clean for optimal performance.

15. MicroSD Card slot Use for additional storage space of items such as pictures, videos, music, etc.

16. Battery Fully charge the battery before initial use to optimize your battery life.

17. Back cover Protects the battery and internal antenna. Keep it from getting scratched or damaged.

Getting Started

The Battery

Installing the battery

1. To remove the back cover, hold the phone firmly in one hand. With your other hand, place your thumbnail in the cutout on the side of the phone as shown in the illustration below.



2. Insert the battery into the opening on the back on the phone, making sure the connectors align (1) and press down until it clicks into place (2).



3. Align the back cover over the battery compartment (1) and press down along the outer edge of phone (2).



Charging the Battery

Fully charge the battery before using your phone for the first time to improve your battery lifetime.

The USB/Charging port is at the bottom of the phone. Insert one end of the Charger Cable into the port and plug the Charger into an electrical outlet.



Turning The Phone On / Off

Turn Phone On

- To turn on your phone, press and hold the **Power / Lock key** (on the right side of the phone) for a couple of seconds until the screen lights up.

Turn Phone Off

- To turn off the phone, press and hold the **Power / Lock key** (on the right side of the phone), tap **Power off** in the menu that appears, then tap **OK** to confirm.

Lock / Unlock Your Phone

Set a screen lock to secure your phone and prevent unauthorized use.

Locking Your Phone

- Press the **Power / Lock key** (on the right side of the phone).

Unlocking Your Phone

1. Turn the screen on.

- Press the **Power / Lock key** (on the right side of the phone).

2. The default Lock screen will appear.

- To unlock the screen, swipe your finger across the screen in any direction.

- To use a Swipe Lock screen shortcut, swipe the shortcut icon (at the bottom of the screen) in any direction. The screen will unlock and launch the app.

Phone Features

Turning Wi-Fi On / Off

1. From the Home screen, tap the **Menu key** > **Settings > Wi-Fi**.

2. Tap the **Wi-Fi switch** (off) to turn it on and start scanning for available Wi-Fi networks.

- Secured networks are indicated by a lock icon.

3. Tap a network to connect to it.

- If the network is secured, you're prompted to enter a password or other credentials.

Accessing Internet

Use the Chrome app to search for information and browse webpages. Access and selections within this feature are dependent upon your service provider.

- From the Home screen, tap **Apps > Chrome**.

Messaging

1. From the Home screen, tap the **Messaging** icon (green square with white text), then tap the **New icon** (+) (in the upper-right corner of the screen).

2. Enter the recipient(s) in the **To** field.

- Tap the **Contacts** icon (person icon) (to the right of the **To** field) to easily select one or more entries from your contacts.

- Manually enter a name or number. Matching contact entries will appear (below the **To** field). Tap one to enter it, or continue entering the number.

NOTE Enter a comma to separate manual number entries.

3. Tap the text field and enter your message.

4. Tap the **Menu key** to access messaging options including **Add to Contacts**, **Insert smiley**, **Add subject**, **Discard**, and **Priority**.

TIP Tap the **Attach** icon (on the right side of the screen) to attach a file you want to share.

5. Tap **Send** (or **Send MMS**) to send your message.

Taking a Picture


1. Open the **Camera** (camera icon) app.

2. Point the lens toward the subject you want to photograph.

NOTE The captured image retains the orientation in which it was taken. If you hold the phone both vertically and horizontally to take pictures, you'll need to rotate the phone to view full screen images in the Gallery app.

TIP While viewing a photo, you can tap the **Menu key** (menu icon), then tap **Rotate right / left** to manually change its orientation.

3. Tap the **Capture icon** (camera shutter icon) to take the photo.

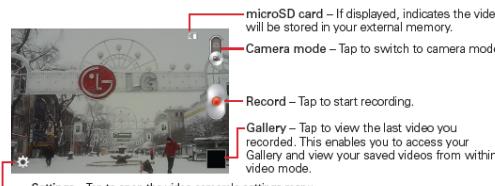

Recording a Video

1. Open the **Camera** (camera icon) app, then tap the **Video mode icon** (video camera icon) (on the viewfinder) to switch to video mode.

2. The video camera viewfinder appears on the screen.

3. Point the lens toward the subject you want to capture in your video.

NOTE The video retains the orientation in which it was taken. If you hold the phone both vertically and horizontally to take videos, you'll need to rotate the phone to view your videos in full screen in the Gallery app.

4. Tap the **Record icon** (recording camera icon) once to start recording.

NOTE The Record icon changes to the Pause icon (recording camera icon with a pause button) once the recording starts. Tap it to pause your recording.

5. A timer showing the length of the video is displayed.

6. Tap the **Stop icon** (stop camera icon) (in the lower-right corner of the viewfinder) to stop recording.

Bluetooth

You must pair your phone with another device before you connect to it.

1. From the Home screen, tap the **Menu key** > **Settings > Bluetooth**.

2. Tap the **Bluetooth** switch (off) to turn it on.

3. Tap the check box next to your phone's name to make your phone visible to other Bluetooth devices.

4. A list of available devices will be displayed. Tap the device you want to pair with from the list.

NOTE Depending on the type of device, you may have to enter matching codes, confirm matching codes, or the devices may automatically pair.

Making and Answering Calls

Making Calls

1. From the Home screen, tap **Phone** (phone icon) to open the dial pad in the Phone app.

2. Enter the number using the dial pad. To delete a digit, tap the **Delete key** (backspace icon).

3. Tap the **Phone icon** (call icon) to call the number you entered.

TIP To enter "+" to make international calls, touch and hold **0**.

Answering Calls

When the screen is locked

- Swipe the **Answer icon** (green circle with a white phone receiver) in any direction to answer the incoming call.

- Swipe the **Ignore icon** (red circle with a white phone receiver) in any direction to decline an incoming call.

When the screen is unlocked

- Tap the **Answer icon** (green phone icon) to answer the incoming call.

- Tap the **Ignore icon** (red phone icon) to decline the incoming call.

Ending Calls

To end a call, tap the **End call button** (red phone receiver icon).

Voicemail

Setting Up Voicemail

1. From the Home screen, tap **Phone**.

2. Touch and hold **1** to dial your voicemail number.

3. Follow the system prompts to:

- Create your password.
- Record your name announcement.
- Record your greeting.

Checking Voicemail

1. From the Home screen, tap **Phone**.

2. Touch and hold **1**. If prompted, enter your voicemail password.

3. Follow the voice prompts to listen to and manage your voicemail messages.